


Title: How to Re-tension a EuroVision Blind	No: SOP00262
Issued By: Zoë Green	Authorised By: Michael Freney
Original Issue Date: 16/10/18	Revision No: A Rev'n Date:

How to Re-tension a EuroVision Blind

Re-tensioning a EuroVision window blind is quite simple. If the blinds are fitted with block-out at the bottom (rising up) and screen at the top (pulling down), the adjustment only needs to be made to top right side of blind.

Read through the instructions completely before beginning.

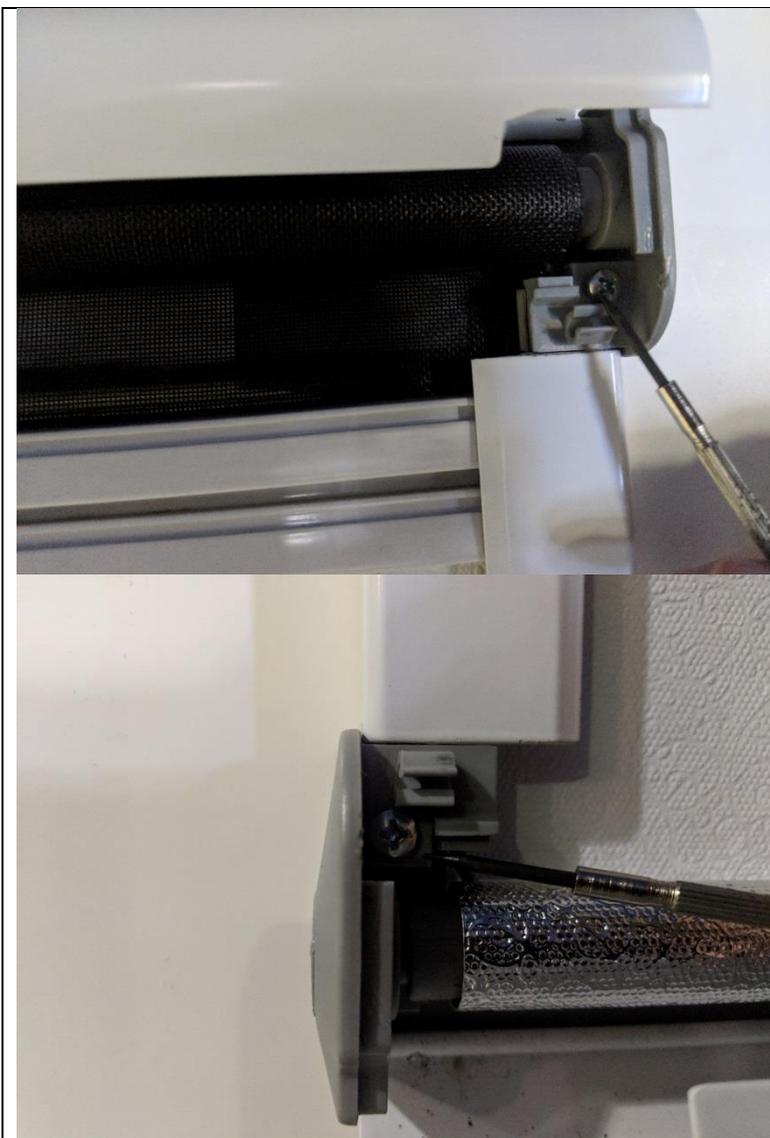

If blind needs to be removed due to limited space, open the container top & bottom. Remove screws from all 4 corners. Lift complete blind assembly up slightly to disengage from lugs at top of inner window frame.

If you can access the side plugs, then there is no need to remove the blind from the wall.



Stainless Steel lugs holding the blind assembly to the window.



There is a hex plug situated in centre of what looks like a round cap on each grey corner of the blind assembly.

A pointed awl is required to remove the hex plug.



The grey plug just slides out and is about 10mm long.

Retain the plug.



Once the plug has been removed, the 6mm hex-shaped hole should be clear.



Rotate 6mm Allen key anti clockwise, taking care to keep pressure against the plug so as not to pull the spring out of container.



This will unscrew the larger plug and will be already putting more tension on the spring. Usually 3 to 6 turns should add sufficient tension. When enough tension is achieved, while still holding plug against container let it turn clockwise a little and the plug will lock itself back in.



Then push in the little hex plug that was removed in earlier.