


Recommended tow vehicle wiring V3.0 - Vans built from January 2020: Electric Drum Brake system. - Standard wiring.
Standard wiring includes ESC fitted to Van via RED Anderson plug.

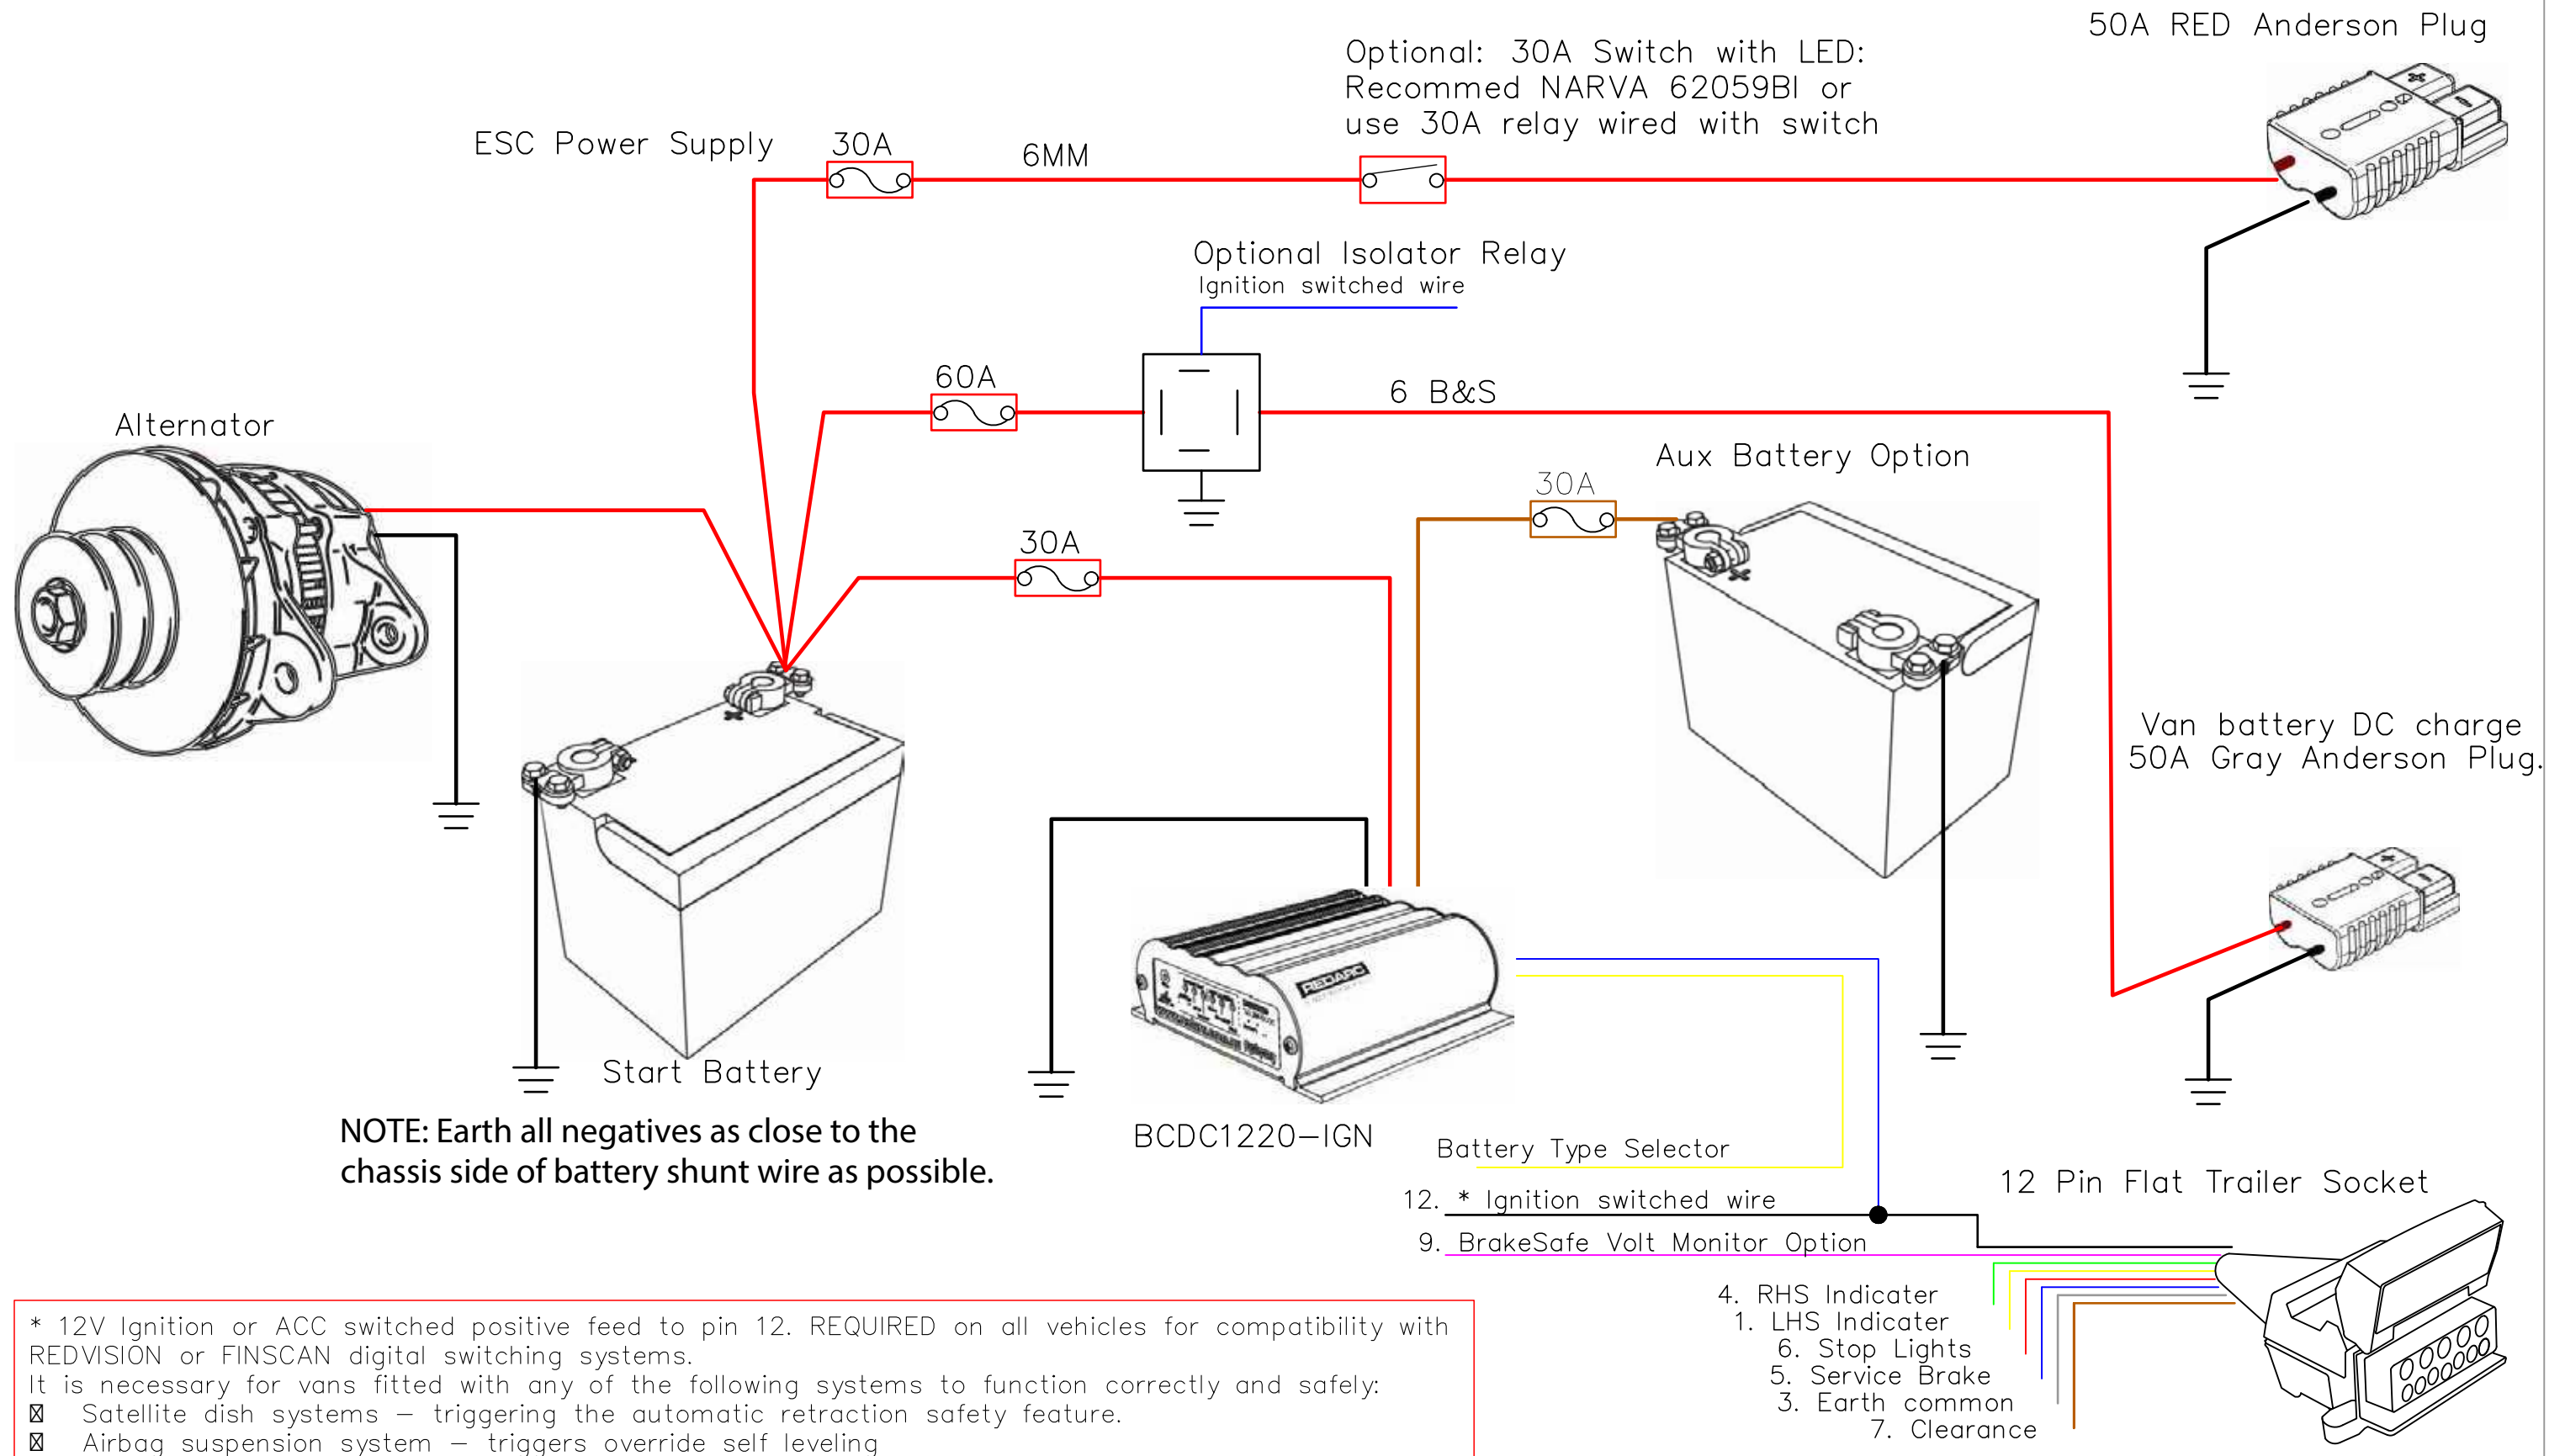

* 12V Ignition or ACC switched positive feed to pin 12. REQUIRED on all vehicles for compatibility with REDVISION or FINSCAN digital switching systems.
It is necessary for vans fitted with any of the following systems to function correctly and safely:
 Satellite dish systems – triggering the automatic retraction safety feature.
 Airbag suspension system – triggers override self leveling